



Model ANK20

OPERATOR'S MANUAL

NAILER/STAPLER KIT

**SAFETY • ASSEMBLY • OPERATION • MAINTENANCE •
TROUBLESHOOTING • ESPAÑOL**

⚠ WARNING Read Operator's Manual. Do not operate equipment until you have read this Operator's Manual for **Safety, Assembly, Operation, and Maintenance Instructions**.

TABLE OF CONTENTS

Safety Guideline-Definitions	2
Important Safety Instructions	2-5
Lubrication and Maintenance	6-7
Recommended Hook-up	7
Contact Trip Safety Mechanism	8-9
Loading the Tool	9-10
Operating the Tool	10
Clearing a Jam From the Tool	11-12
Troubleshooting	13
Specifications	14
Fasteners	15
Warranty	16

SAFETY GUIDELINES - DEFINITIONS

This manual contains information that is important for you to know and understand. This information relates to protecting **YOUR SAFETY** and **PREVENTING EQUIPMENT PROBLEMS**. To help you recognize this information, we use the symbols below. Please read the manual and pay attention to these sections.

<p>SAFETY and PREVENTING EQUIPMENT PROBLEMS. To help you recognize this information, we use the symbols below. Please read the manual and pay attention to these sections.</p>	
<p>▲ DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</p>	<p>▲ CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
<p>▲ WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</p>	<p>CAUTION Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>

IMPORTANT SAFETY INSTRUCTIONS

▲ WARNING Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some example of these chemicals are:

- lead from lead-based paints
- crystalline silica from bricks and cement and other masonry products
- arsenic and chromium from chemically-treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, always wear **MSHA/NIOSH** approved, properly fitting face mask or respirator when using such tools.

When using air tools, basic safety precautions should always be followed to reduce the risk of personal injury.








SAVE! IMPORTANT SAFETY INSTRUCTIONS SAVE!






⚠ WARNING

IMPROPER OPERATION OR MAINTENANCE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY AND PROPERTY DAMAGE. READ AND UNDERSTAND ALL WARNINGS AND OPERATING INSTRUCTIONS BEFORE USING THIS EQUIPMENT. WHEN USING AIR TOOLS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF PERSONAL INJURY.

HAZARD	WHAT COULD HAPPEN	HOW TO PREVENT IT
<p>⚠ WARNING RISK OF EYE OR HEAD INJURY</p> 	<ul style="list-style-type: none"> • Air powered equipment and power tools are capable of propelling materials such as fasteners, metal chips, saw dust, and other debris at high speed, which could result in serious eye injury. • Compressed air can be hazardous. The air stream can cause injury to soft tissue areas such as eyes, ears, etc. Particles or objects propelled by the stream can cause injury. • Tool attachments can be come loose or break and fly apart propelling particles at the operator and others in the work area. 	<ul style="list-style-type: none"> • Always wear ANSI approved Z87.1 safety glasses with side shields. • Never leave operating tool unattended. Disconnect air hose when tool is not in use. • For additional protection use an approved face shield in addition to safety glasses.
<p>RISK OF FIRE OR EXPLOSION</p> 	<ul style="list-style-type: none"> • Abrasive tools such as sanders and grinders, rotating tools such as drills, and impact tools such as nailers, staplers, wrenches, hammers, and reciprocating saws are capable of generating sparks which could result in ignition of flammable materials. • Exceeding the maximum pressure rating of tools or accessories could cause an explosion resulting in serious injury. 	<ul style="list-style-type: none"> • Make sure that any attachments are securely assembled. • Never operate tools near flammable substances such as gasoline, naphtha, cleaning solvents, etc. • Work in a clean, well ventilated area free of combustible materials. • Never use oxygen, carbon dioxide or other bottled gases as a power source for air tools. • Use compressed air regulated to a maximum pressure at or below the rated pressure of any attachments.
<p>RISK OF LOSS OF HEARING</p> 	<ul style="list-style-type: none"> • Long term exposure to noise produced from the operation of air tools can lead to permanent hearing loss. 	<ul style="list-style-type: none"> • Always wear ANSI S3.19 hearing protection.
<p>RISK TO BREATHING INHALATION HAZARD</p> 	<ul style="list-style-type: none"> • Abrasive tools, such as grinders, sanders, and cut-off tools generate dust and abrasive materials which can be harmful to human lungs and respiratory system. • Some materials such as adhesives and tar, contain chemicals whose vapors could cause serious injury with prolonged exposure. 	<ul style="list-style-type: none"> • Always wear MSHA/NIOSH approved, properly fitting face mask or respirator when using such tools. • Always work in a clean, dry, well ventilated area.

HAZARD	WHAT COULD HAPPEN	HOW TO PREVENT IT
<p data-bbox="157 134 247 152">▲WARNING</p> <p data-bbox="136 155 288 173">RISK OF INJURY</p> 	<ul style="list-style-type: none"> <li data-bbox="341 134 618 228">• Tools left unattended, or with the air hose attached can be activated by unauthorized persons leading to their injury or injury to others. <li data-bbox="341 250 618 310">• Air tools can propel fasteners or other materials throughout the work area. <li data-bbox="341 428 618 488">• Air tools can become activated by accident during maintenance or tool changes. <li data-bbox="341 699 618 810">• Air tools can cause the workpiece to move upon contact leading to injury. <li data-bbox="341 773 618 810">• Loss of control of the tool can lead to injury to self or others. <li data-bbox="341 1005 632 1154">• Poor quality, improper, or damaged tools such as grinding wheels, chisels, sockets, drills, nailers, staplers, etc., can fly apart during operation, propelling particles throughout the work area causing serious injury. <li data-bbox="341 1248 605 1308">• Using air tools to attach electrical wiring can result in electrocution or death. <li data-bbox="341 1321 607 1398">• Fasteners coming in contact with hidden electrical wiring could cause electrocution or death. 	<ul style="list-style-type: none"> <li data-bbox="660 134 937 212">• Remove air hose when tool is not in use and store tool in secure location away from reach of children. <li data-bbox="660 250 937 310">• Use only parts, fasteners, and accessories recommended by the manufacturer. <li data-bbox="660 315 937 393">• Keep work area clean and free of clutter. Keep children and others away from work area during operation of the tool. <li data-bbox="660 397 873 415">• Keep work area well lit. <li data-bbox="660 428 953 506">• Remove air hose to lubricate or add grinding attachments, sanding discs, drills, etc. to the tool. <li data-bbox="660 511 910 555">• Never carry the tool by the hose. <li data-bbox="660 560 921 620">• Avoid unintentional starting. Don't carry hooked-up tool with finger on trigger. <li data-bbox="660 625 916 685">• Repair servicing should be done only by an authorized service representative. <li data-bbox="660 699 926 743">• Use clamps or other devices to prevent movement. <li data-bbox="660 773 948 816">• Never operate tool while under the influence of drugs or alcohol. <li data-bbox="660 821 937 881">• Don't overreach. Keep proper footing and balance at all times. <li data-bbox="660 886 932 930">• Keep handles dry, clean, and free from oil and grease. <li data-bbox="660 935 948 995">• Stay alert. Watch what you are doing. Use common sense. Do not operate tool when you are tired. <li data-bbox="660 1005 926 1065">• Always use tool attachments rated for the speed of the power tool. <li data-bbox="660 1070 921 1130">• Never use tools which have been dropped, impacted or damaged by use. <li data-bbox="660 1135 926 1179">• Use only impact grade sockets on an impact wrench. <li data-bbox="660 1183 932 1227">• Do not apply excessive force to the tool – let the tool perform the work. <li data-bbox="660 1248 921 1308">• Never use nailer/staplers to attach electrical wiring while energized. <li data-bbox="660 1321 932 1398">• Never use nailer/staplers to attach material to areas that may contain hidden electrical wires.

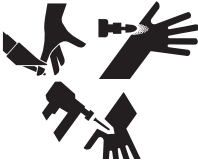HAZARD	WHAT COULD HAPPEN	HOW TO PREVENT IT
<p>⚠ WARNING RISK OF INJURY (continued)</p> 	<p>Fasteners could ricochet or be propelled causing serious injury or property damage.</p>	<p>Never point discharge of tool at self or others.</p> <p>Do not pull trigger unless tool contact safety device is against work surface.</p> <p>Never attempt to drive fasteners into hard surfaces such as steel, concrete, or tile.</p> <p>Take care to avoid driving a fastener on top of another fastener.</p> <p>Position tool carefully so that fasteners will be delivered to the proper location.</p>
<p>⚠ WARNING RISK OF ENTANGLEMENT</p> 	<ul style="list-style-type: none"> Tools which contain moving elements, or drive other moving tools, such as grinding wheels, sockets, sanding discs, etc. can become entangled in hair, clothing, jewelry and other loose objects, resulting in severe injury. 	<ul style="list-style-type: none"> Never wear loose fitting clothes, or apparel which contains loose straps or ties, etc. which could become entangled in moving parts of the tool. Remove any jewelry, watches, identifications, bracelets, necklaces, etc. which might become caught by the tool. Keep hands away from moving parts. Tie up or cover long hair. Always wear proper fitting clothing and other safety equipment when using this tool.
<p>RISK OF CUT OR BURNS</p> 	<ul style="list-style-type: none"> Tools which cut, shear, drill, staple, punch, chisel, etc. are capable of causing serious injury. 	<ul style="list-style-type: none"> Keep the working part of the tool away from hands and body.

LUBRICATION AND MAINTENANCE

⚠ CAUTION Do not store the tool in cold weather. Frost or ice can form on the operating valves or mechanisms and the tool may not operate correctly.

⚠ CAUTION In cold weather operation (near or below freezing), DO NOT USE a permanent antifreeze such as ethylene glycol for a cold weather lubricant. This type of antifreeze will damage o-rings and seals of the tool.

NOTE: Proper lubrication is the owner's responsibility. Failure to lubricate the tool properly will dramatically shorten the life of the tool and void your warranty.

⚠ CAUTION Your tool requires lubrication before you use it for the first time and before and after each additional use. If an Oiler is used, manual lubrication through the air inlet is not required on a daily basis. Lubrication prevents wear and prevents rust from forming.

1. Disconnect the air supply from the tool before manually lubricating.
2. Turn the tool so the air inlet is facing up and put **one drop** of DeVilbiss Air Tool Oil (supplied) into the air inlet. High speed spindle oil, such as Unocal RX22, or 3-in-1 oil can be used, DO NOT USE detergent oil or additives. Operate the tool briefly after adding oil. (See Figure 1)

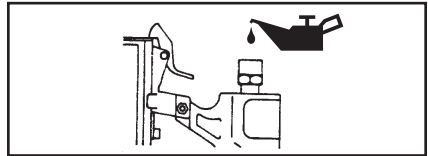


Figure 1

⚠ WARNING Keep out of the reach of children. If taken internally, do not induce vomiting, call a doctor immediately or contact your local poison control center.

DO NOT OVER LUBRICATE AIR TOOL.

3. Wipe off excessive oil at the exhaust.

NOTE: Many air tool users find it convenient to use an Oiler to help provide oil circulation through tool. An Oiler also increases the efficiency and useful life of the tool. An oiler is recommended for tools that receive heavy or constant use. Check oil level in the oiler daily. (See Figure 2)

Many air tool users find it convenient to use a Filter to remove liquid and solid impurities which can rust or "gum up" internal parts of the tool. A Filter also increases the efficiency and useful life of the tool. Filter will need to be properly maintained, see maintenance information supplied with filter for proper maintenance care. (See Figure 2)

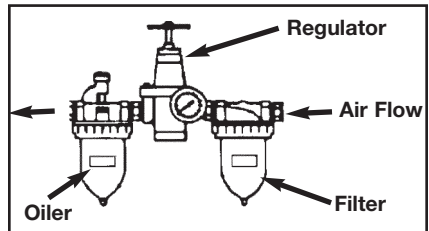


Figure 2

NOTE: Excessive oil will damage o-rings and seal of tool. If in-line oiler is used, manual lubrication through the air inlet is not required on a daily basis.

⚠ DANGER Do not use any type of flammable gases or oxygen as a power source for the tool. Use filtered, lubricated, regulated compressed air only. Use of compressed gas instead of compressed air may cause the tool to explode and cause death or serious personal injury.

⚠ WARNING Do not use a check valve or any other fittings which will allow air to remain in the tool. Serious personal injury or property damage could occur.

⚠ WARNING Use a **Pressure Regulator** on your compressor with an operating pressure of 0-125 PSI. A **Pressure Regulator** is required to control the operating pressure of your tool. Refer to the label on your nailer/stapler for the maximum P.S.I.


⚠ WARNING Never carry the tool by the hose or pull the hose to move the tool or a compressor. Keep hoses away from heat, oil, and sharp edges. Replace any damaged, weak or worn hoses.

The air compressor must be able to maintain a minimum of 65 PSI when the tool is being used. An **inadequate** air supply can cause a loss of power or inconsistent operation.

IMPORTANT: Always connect the quick connect body to the air hose. **Never** connect the quick connect body to the tool.

RECOMMENDED HOOK-UP

The following illustration shows the proper hook-up which will help prolong the life of the Tool.

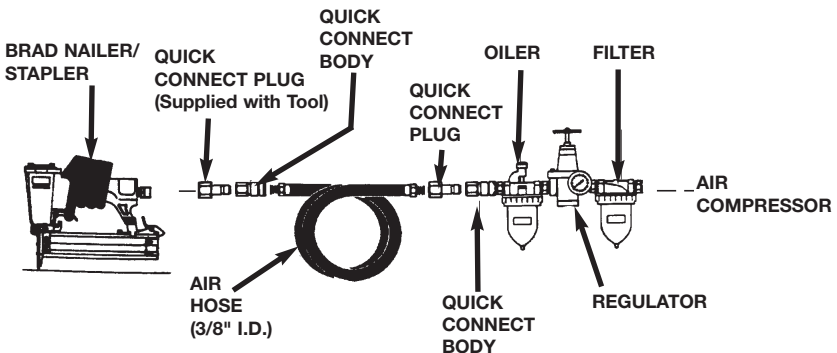

CONTACT TRIP SAFETY MECHANISM

⚠ DANGER Never keep the trigger pulled on contact trip tools when carrying or holding the tool. Death or a serious puncture wound could occur if the contact trip bumps something or someone.

⚠ CAUTION Do not hold the tool against the work surface with extra force. Allow the tool to drive the fastener.

⚠ WARNING Do not use the contact trip mechanism as a means of discharging a fastener because:

1. It could result in personal injury
2. It could result in an accidental release of a fastener.
3. It may cause damage to the mechanism.
4. It could result in improper placement of fastener in work piece.

⚠ WARNING Keep your hands and body away from the fastener discharge area of the tool. Serious personal injury or property damage could occur.

Your Nailer/Stapler is a contact trip operated tool. When the operator depresses the contact trip safety mechanism against the work surface and then pulls the trigger, a fastener will be driven.

OPERATING A CONTACT TRIP TOOL:

1. Requires finger to be off the trigger and the nose of the Tool to be placed on the work surface.
2. The contact trip safety mechanism is then depressed against the work surface and the trigger pulled to drive a fastener.
3. The trigger is released after each fastener is driven.
4. Move the tool to the next desired fastener location and repeat the procedure above.

CHECKING THE OPERATION OF CONTACT TRIP SAFETY MECHANISM

⚠ CAUTION Check the operation of the contact trip safety mechanism often. Do not use the tool if the contact trip safety mechanism is not working correctly.

1. Disconnect the air supply from the tool.
2. Remove all fasteners from the magazine.
3. Make sure the trigger and contact trip safety mechanism move up and down without any sticking or binding.
4. Reconnect air supply to the tool.
5. Depress the contact trip safety mechanism against the work surface without pulling the trigger. The tool must not cycle. Do not use the tool if a cycle occurs.

6. Hold the tool clear of the work surface. The contact trip safety mechanism should return to its original down position. Pull the trigger. The tool **must not** cycle. **Do not** use the tool if a cycle occurs.
7. Depress the contact trip safety mechanism against the work surface. Pull the trigger. The tool **must** cycle.

⚠ WARNING Make sure not to pull the trigger or depress the contact trip safety mechanism when connecting the tool to an air compressor. Serious personal injury or property damage can occur if the tool cycles.

LOADING THE TOOL

⚠ WARNING Disconnect tool from air supply before adjusting, clearing jams, servicing, relocating or during non-operation. Failure to do so could result in serious injury or property damage.

⚠ WARNING Never place your hand or any part of your body in the fastener discharge area of the tool when air supply is connected to the tool. Serious personal injury may occur.


⚠ WARNING Handle the tool carefully. Respect the tool as a working implement and always assume the tool contains fasteners:

- a. Never use the tool as a toy and engage in horseplay.
- b. Never aim or point the tool at anyone. The tool may contain fasteners.
- c. Always keep people and animals at a safe distance from the work area in case of accidental discharge of fasteners.
- d. Never pull the trigger unless the nose of the tool is **against** the work surface.
- e. Do not pull the trigger or depress the contact trip when loading the tool.


NOTE: See specification and fastener section for fastener information.

Loading the Tool

1. Disconnect air hose.
2. Depress magazine latch and slide magazine open.

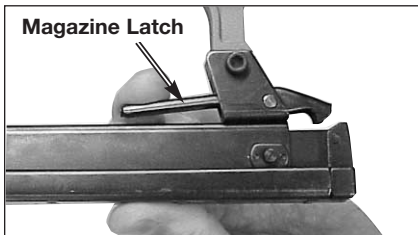

Stapler

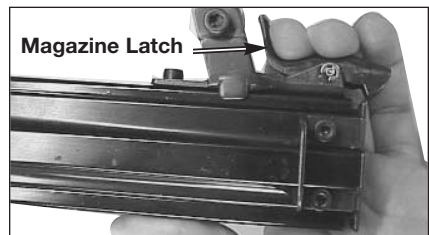

Brad Nailer

3. Insert a stick of fasteners into the magazine. Make sure fasteners are not dirty or damaged. Use DeVilbiss fasteners or equivalent for proper fastener performance.



Stapler



Brad Nailer

NOTE: On brad nailer make sure the pointed ends of the fasteners are loaded with the points downward.

4. Slide magazine until it locks in place.

OPERATING THE TOOL

READ THIS MANUAL AND UNDERSTAND ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE OPERATING TOOL.

▲WARNING Protect your eyes and ears. Wear Z87.1 safety glasses with side shields. Wear hearing protection. Employers and users are responsible for ensuring the user or anyone near the tool uses the prescribed safety equipment.

1. Add **one drop** of DeVilbiss Air Tool Oil (supplied) into the air inlet. High speed spindle oil, such as Unocal RX22, or 3-in1 oil can be used.

▲WARNING Keep out of the reach of children. If taken internally, do not induce vomiting, call a doctor immediately or contact your local poison control center.

2. Connect the Tool to the air supply.
3. Regulate the air pressure to obtain a minimum of 75 PSI at the tool.
4. Set air pressure regulator to 75 PSI and test for proper fastener penetration by driving fasteners into a sample piece of wood. If the fasteners do not achieve the desired penetration, adjust the air pressure to a lower or higher setting until the desired penetration is achieved. Do not exceed the maximum operating PSI at the tool.


NOTE: Check and replace any damaged or worn components on the tool. The safety warning labels on the tool must also be replaced if they are not legible.

CLEARING A JAM FROM THE TOOL


⚠ WARNING Disconnect tool from air supply before adjusting, clearing jams, servicing, relocating or during non-operation. Failure to do so could result in serious injury or property damage.

FASTENER JAM INSIDE MAGAZINE:

1. Disconnect tool from air hose.
2. Release the magazine latch to open the magazine.

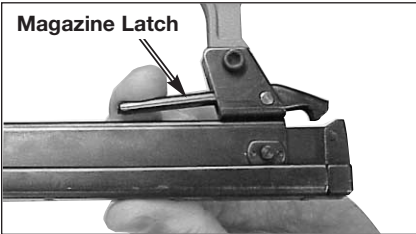

Stapler

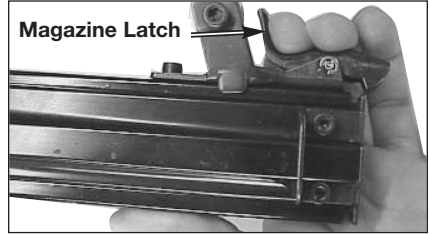


Brad Nailer

3. Remove jammed fasteners.
4. Reload fasteners into magazine. Refer to Loading the Tool section in this manual.

FASTENER JAMMED IN FASTENER DISCHARGE AREA:


For Stapler

1. Disconnect tool from air hose.
2. Release the magazine latch to open the magazine.
3. Remove fasteners from magazine.
4. Loosen the three screws on the driver guide cover.
5. Remove the two screws holding the driver guide cover to the gun body.

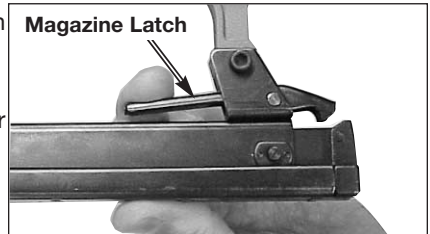

IMPORTANT: Before removing driver guide cover note the orientation of all parts.

6. Slide driver guide cover out until jammed fastener is visible
7. Using pliers remove fasteners.
8. Slide driver guide cover into place and line up holes in spring retainer and bracket. Replace screws.
9. Tighten all screws securely.
10. Reload fasteners into magazine. Refer to Loading the Tool section in this manual.

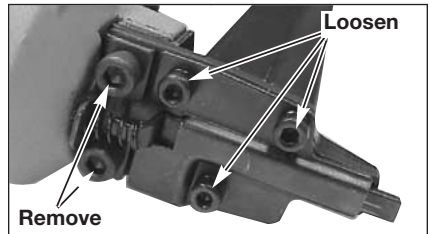



For Brad Nailer

1. Disconnect tool from air hose.
2. Release the magazine latch to open the magazine.
3. Remove fasteners from magazine.
4. Remove the three screws on the driver guide cover.

IMPORTANT: Before removing driver guide cover note the orientation of all parts.

6. Slide driver guide cover and driver cover out until jammed fastener is visible
7. Using pliers remove fasteners.
8. Slide drive guide cover and driver cover into place and line up holes. Replace screws.
9. Tighten screws securely.

10. Reload fasteners into magazine. Refer to Loading the Tool section in this manual.

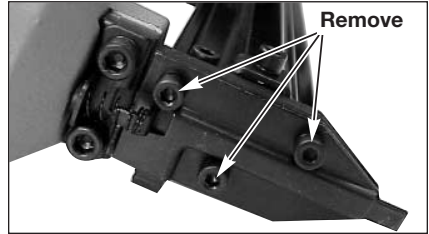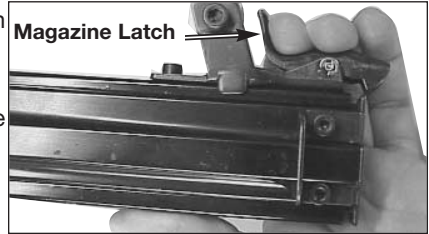

TROUBLESHOOTING

PROBLEM	CAUSE	CORRECTION
Fasteners are jammed in tool	Fasteners are not the correct size.	See specification and fastener sections for correct fastener information.
	Fasteners are bent	Replace with undamaged fasteners.
Brad Nailer/Stapler misfires or sinks two nails/staples at the same time	Air pressure regulated too high	Adjust air pressure to the correct PSI, see specifications.
Sluggish operation	Loose drive guide screws	Tighten screws.
Tool does nothing	Air supply inadequate	Check PSI and CFM
Weak drive	Air supply inadequate	Check PSI and CFM
Tool fails to drive fastener	Inadequate air flow or pressure to tool.	Check air flow and pressure to tool.
Tool runs slow or has loss of power	Tool not lubricated sufficiently.	Tool needs to be lubricated.
	Inadequate air flow or pressure to tool.	Check air flow and pressure to tool.

STAPLER/BRAD NAILER KIT ANK20



SPECIFICATIONS

Stapler

Max. P.S.I.	120
Operating Pressure	60-100 PSI
Air Inlet	1/4 NPT
Magazine Capacity	100 staples
Recommended Fasteners	18 gauge narrow crown staples, 1/4"x3/8" to 1"


Brad Nailer

Max. P.S.I.	120
Operating Pressure	60-100 PSI
Air Inlet	1/4 NPT
Magazine Capacity	100 brads
Recommended Fasteners	18 gauge brads, 5/8" to 1-1/4"

FASTENERS


Fasteners for the stapler fit and interchange with fasteners for the following brands of guns:

2by4, Senco, Porter-Cable, Duofast, Craftsman

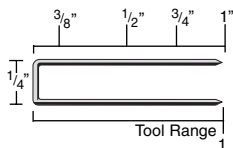

Fasteners for the brad nailer fit and interchange with fasteners for the following brands of guns:

2by4, Stanley-Bostitch, Senco, Paslode, Porter-Cable, Duofast, Craftsman

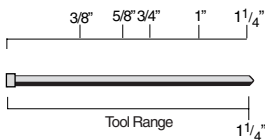

LIMITED WARRANTY

All merchandise manufactured by DeVilbiss Air Power Company Manufacturing is warranted to be free of defects in workmanship and material which occur during the first year from the date of purchase by the original purchaser (initial user). Products covered under this warranty include: air compressors, *air tools, accessories, service parts, pressure washers, and generators used in consumer applications (i.e., personal residential household usage only).

Air compressors, *air tools, accessories, service parts, pressure washers, and generators used in commercial applications (income producing) are covered by a 90 day warranty.

DeVilbiss Air Power Manufacturing will repair or replace, at DeVilbiss' option, products or components which have failed within the warranty period. Repair or replacement, and service calls on 60 and 80 gallon air compressors, will be handled by Authorized Warranty Service Centers and will be scheduled and serviced according to the normal work flow and business hours at the service center location, and depending on the availability of replacement parts.

All decisions of DeVilbiss Air Power Company Manufacturing with regard to this policy shall be final. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RESPONSIBILITY OF ORIGINAL PURCHASER (Initial User):

- To process a warranty claim on this product, DO NOT return it to the retailer. The product must be evaluated by an Authorized Warranty Service Center. For the location of the nearest Authorized Warranty Service Center call 1-800-888-2468, Ext. 2, 24 hours a day, 7 days a week or visit our web site @ devap.com.
- Retain original cash register sales receipt as proof of purchase for warranty work.
- Use reasonable care in the operation and maintenance of the product as described in the Owners Manual(s).
- Deliver or ship the product to the nearest DeVilbiss Air Power Manufacturing Authorized Warranty Service Center. Freight costs, if any, must be paid by the purchaser.
- Air compressors with 60 and 80 gallon tanks only will be inspected at the site of installation. Contact the nearest Authorized Warranty Service Center, that provides on-site service calls, for service call arrangement.
- If the purchaser does not receive satisfactory results from the Authorized Warranty Service Center, the purchaser should contact DeVilbiss Air Power Company Manufacturing.

THIS WARRANTY DOES NOT COVER:

- Merchandise sold as reconditioned, floor models and/or display models. Any damaged or incomplete equipment sold "as is".
- Merchandise used as "rental" equipment.
- Merchandise that has become inoperative because of ordinary wear, misuse, freeze damage, use of improper chemicals, negligence, accident, improper and/or unauthorized repair or alterations including failure to operate the product in accordance with the instructions provided in the Owners Manual (s) supplied with the product.

*Air Tools: O-Rings and driver blades are considered ordinary wear parts, therefore, they are warranted for a period of 45 days from the date of purchase.

- An air compressor that pumps air more than 50% during a one hour period is considered misuse because the air compressor is undersized for the required air demand. Maximum compressor pumping time per hour is 30 minutes.
- Merchandise sold by DeVilbiss Air Power Manufacturing which has been manufactured by and identified as the product of another company. The product manufacturer's warranty will apply.
- Repair and transportation costs of merchandise determined not to be defective.
- Cost associated with assembly, required oil, adjustments or other installation and start-up cost.
- Any incidental, indirect or consequential loss, damage, or expense that may result from ANY defect, failure or malfunction of the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- Implied warranties, including those of merchantability and fitness for a particular PURPOSE, are limited to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.



213 Industrial Drive • Jackson, TN 38301-9615
Telephone: 1-800-888-2468, Ext. 2
FAX: 1-800-888-9036